SAFETY PRODUCTS

SPECS ■ Connections

Valve to cap:

Female Luer Materials

> Polypropylene Filter: Cellulose

> > (O-ring is not

NBR

1/4-28

Housing:

O-ring:

Filter:



Safety air inlet valves

- No evaporation of volatile compounds into lab air
- Better composition stability of the mobile phases
- Less shift of retention times
- No bacterial contamination
- Fit any VICI cap or VICI safety cap

The air inlet valve has a check valve which blocks vapors of the solution in a bottle, preventing the vapors from escaping into the lab. The mobile phase composition remains stable, resulting in constant retention times.

a wetted part) The check valve regulates the pressure when the negative pressure reaches 1.5 psi or 0.1 bar. This small negative pressure prevents evaporation of the liquid (lower vapor pressure) and still guarantees the stability of the flow rate. A negative pressure which is too high can influence the aspiration of a constant flow.

Several tests have indicated that the 0.2 µm cellulose filter will keep mobile phase liquid free of bacteria and dust particles over time. If you use a filter and still have bacteria growth in your liquid, it is likely due to the presence of bacteria in the deionized water used.

Air inlet valves fit on any VICI safety cap or VICI cap.

Description Product No. With 4 mm filter JR-S-20003 With 15 mm filter JR-S-20009 Without filter JR-S-20006

Spare parts

Replacement cellulose filter

0.2 µm x 4 mm JR-S-20007 JR-S-20008 0.2 µm x 15 mm



with no filter





Safety air outlet filters

The VICI safety air outlet filter regulates the pressure during helium sparging.

Air outlet filters fit on any VICI safety cap or VICI cap.

Description Product No. Safety air outlet filter JR-S-20004



SPECS

- Connections Valve to cap: 1/4-28 Filter: Female Luer
- Materials Housing:

Polypropylene Filter: Cellulose O-ring: NBR (O-ring is not a wetted part)

RELATED PRODUCTS

TECH TIPS

■ The air inlet valve is not

suitable when helium

sparging is used.

■ We recommend that

safety air inlet valves

and safety air outlet

valves be replaced

every 6-7 months to

valve. The lifetime of the check valve and the filter depend on the intensity of use and the quality of the ambient

operation of the check

guarantee correct

Safety caps......62-63 VICI caps64-65

